


# HEATER MAIN RELAY

## FRONT HEATER MAIN RELAY AND REAR HEATER MAIN RELAY REMOVAL

- 1. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
- 2. REMOVE HEATER MAIN RELAYS FROM HEATER RELAY BLOCK

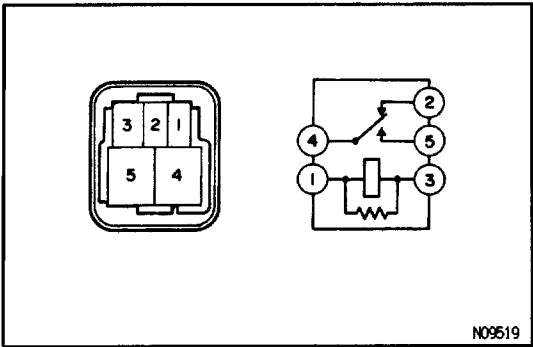

## FRONT HEATER MAIN RELAY AND REAR HEATER MAIN RELAY INSPECTION

### INSPECT HEATER MAIN RELAYS CONTINUITY

Condition	Tester connection to terminal number	Specified value
Constant	1 – 3	Continuity
	2 – 4	
Apply B+ between terminals 1 and 3.	4 – 5	Continuity

If continuity is not as specified, replace the relay.

## FRONT HEATER MAIN RELAY AND REAR HEATER MAIN RELAY INSTALLATION

- 1. INSTALL HEATER MAIN RELAYS
- 2. CONNECT NEGATIVE (-) TERMINAL CABLE TO BATTERY