

11

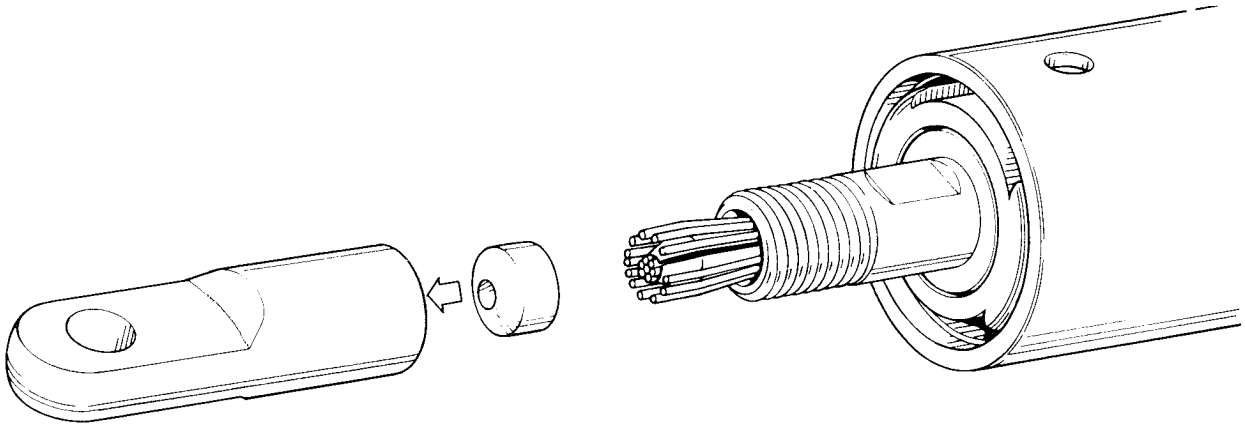


Fig. 10:1

Put the former into the eye part of the terminal. Fit the eye part of the terminal and screw it on so that the wire is formed inside the terminal.

12

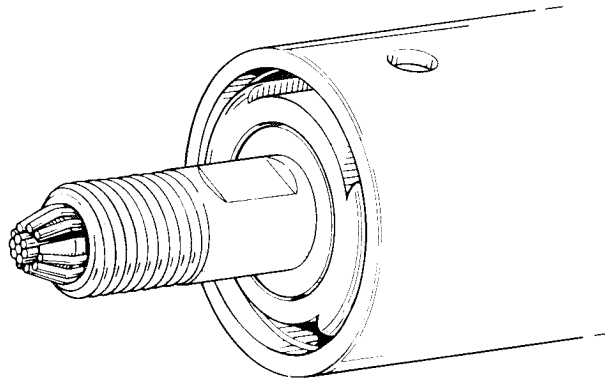


Fig. 10:2

Dismantle again and check the strands. If some strands are crossed, correct their positions.  
**CHECK THAT NO STRAND HAS SLIPPED INTO THE SLOT OF THE WEDGE.**  
 (If the assembly is unsuccessful see page 19 "To dismantle FURLEX" for applicable instructions.)

13

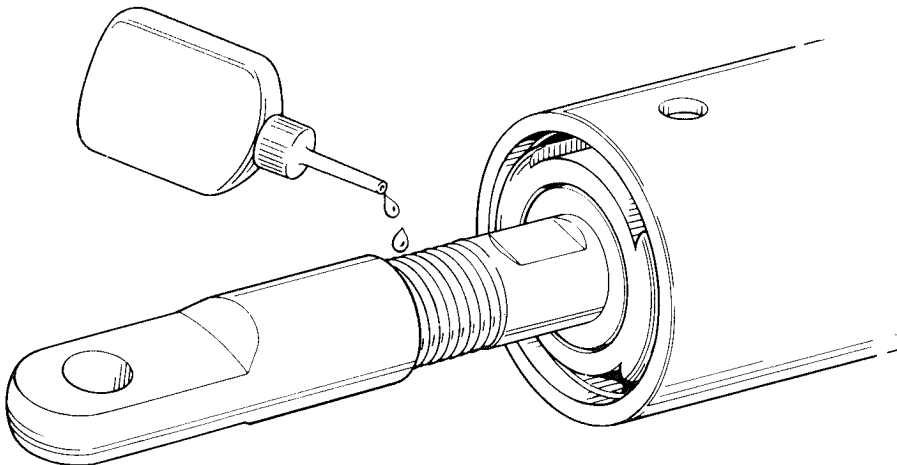


Fig. 10:3

Apply 2 or 3 drops of the locking adhesive on to the male threads and tighten quite hard. The terminal is now permanently locked.  
 When using the adhesive, avoid skin and eye contact.